

GENERAL WARNINGS AND CAUTIONARY STATEMENTS FOR COLLAPSIBLE BOLLARDS

In order to safely and effectively use any TrafficGuard®, Inc. product, please read and understand the General Warnings and Cautionary Statements contained below. If you have any questions about any of these General Warnings and Cautionary Statements, or about any aspect of TrafficGuard®, Inc.'s products or literature, please contact TrafficGuard®, Inc. at 877-727-7347, or email sales@trafficguard.net.



BOLLARD SELECTION AND PLACEMENT

based on vehicle weight, speed and other site specific factors to be determined by owner.



FAILURE TO UTILIZE TRAFFICGUARD®, INC. AUTHORIZED PARTS, OR MODIFICATIONS

to the TrafficGuard®, Inc. products, or failure to follow the recommended installation procedures, will result in your warranty being null and void.



READ AND FULLY UNDERSTAND THE INSTALLATION INSTRUCTIONS

before attempting to install any TrafficGuard®, Inc. bollard product.



SUBSTITUTION OF COMPONENTS MAY IMPAIR THE PROPER FUNCTION

of TrafficGuard®, Inc. bollards products. If you need replacement parts, please contact TrafficGuard®, Inc. at the number and email above.



ALWAYS ENSURE THAT THE LOCK PIN IS LOCKED INTO PLACE

in the upright position with all collapsible bollards.



WARNING: FAILURE TO RETURN COLLAPSIBLE BOLLARD TO UPRIGHT, LOCKED POSITION IMMEDIATELY AFTER USE POSES A SIGNIFICANT HAZARD.



REPLACEMENT LOCK PINS ARE AVAILABLE

for purchase at TrafficGuard®, Inc. For purchase of replacement lock pins or other components, please contact TrafficGuard®, Inc. at the number or email above.



CAUTION: LOCK PIN MUST ALWAYS BE SECURED WITH PADLOCK WHEN BOLLARD IS IN **UPRIGHT POSITION.**



FOR MAXIMUM EFFECTIVENESS

of TrafficGuard®, Inc. bollard products, be sure to properly maintain bollards by replacing any damaged, corroded or missing components, and reapply paint as required to maximize visibility. Failure to properly maintain product can negatively impact the bollards performance over time.



TO ENSURE VISIBILITY

of bollards, be sure to apply all decals that are provided with the product, and in the manner recommended by TrafficGuard®, Inc.

sales@trafficguard.net

IF IN DOUBT CALL TRAFFICGUARD®, INC. 877-727-7347

Copyright © 2008 TrafficGuard®, Inc.

www.trafficguard.net

TrafficGuard,® Inc.

HINGED ROUND POST BOLLARD (HRP)

"The Original Multifunction Bollard" Standard Features Include:

Ease of use in 5 easy steps:

- 1. Remove padlock
- 2. Remove locking pin
- 3. Lower bollard post
- 4. Replace locking pin
- 5. Allows vehicle access

Safety:

30" overall height and "Safety Yellow" finish are standard for high visibility. Custom colors available upon request.

Heavy Duty:

Closed Stellipe Construction Stainless Steel Locking Pin

Proven Performance:


References Available Upon Request


Low Maintenance

Warranty

\$1,000,000 Liability Coverage

Orders for "Safety Yellow" shipped in 48 hours.

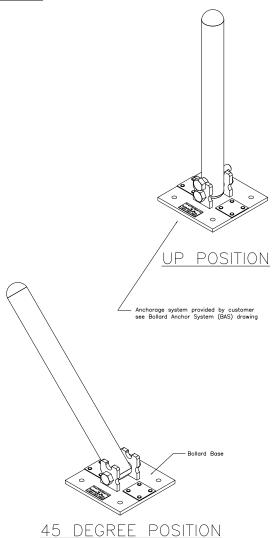

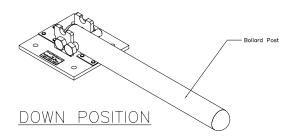

PRODUCT HIGHLIGHTS

Traditional Round Post Bollard appearance

Features single locking pin for easy access

Clearance Height 4" in lowered position

Single Post design with 2-1/2" steel pipe

													_
HINGED ROUND POS	THIRD ANGLE OF		TrafficGuard,® Inc.					c.					
ISOMETRIC DISPLAY	Do not scale from drawing												
	DO HOL GOOD II			١.	Bus: 877-727-7347 Fax: 800-814-7194								
CONSULTING ENGINEER: ZE Job # 04-119						Action	by	1	us: 8/	7-727-7347 F	ax: 800-	814-/194	
ZABEL ENGINEERING	_	_					-	SIZE	Walden	nt Shipping Weight	Drawing Nu		_
						Design	WKZ	SIZE	Melamer	nt Snipping Weight	Drawing No		
CONSULTING ENGINEERS	-		0 47 04	UDD 4 TO4FFIG OU	00	-		חו	35.50	Pounds		HRP	Δ1
203 South Rosedale Av., Aurora, IL, 60506	1 1	WKZ	9-15-04	HRP & TRAFFIC GUA	KU	Drawn	CJD	ע ו	1		1	THAT.	\sim 1 $_{\parallel}$
	Rev.	by	Date	Descrip	tion	Checked	wĸz	Scale:	1 = 4	Drawing Date: 8-	4-2002	Sheet: 1	of 2

INSTALLATION INSTRUCTIONS FOR:

HINGED ROUND POST BOLLARD

- 1. Verify that all Hinged Round Post Bollard parts are in the shipment package as shown on
- Provide Hinged Round Bollard Anchor System (see included Anchor System Drawing-3BAS) of your choice at a location to suit your specific needs.
- Install HRP Base (Item 2) true and level on your selected Anchor System using the flat washers and hex nuts included in your Anchor System Kit. Use S.S. shims to level if needed. Torque hex nuts to Minimum 30 ft—lbs for CPAS10 Anchor System. Torque hex nuts for other Anchor Systems to Manufacturers Specification.
- Install HRP Post (Item 1) to HRP Base (Item 2) using Hinge Bolt (Item 3) and Hex Nut (Item 4) as shown. Tack Weld Hex Nut to Hinge Bolt or Chisel Hinge Bolt Threads such that Hex Nut cannot be easily removed.
- Install HRP Locking Pin (Item 5) thru UP Position Bollard Post, and install Padlock at padlock hole. 6.

CONSULTING ENGINEER:

ZABEL ENGINEERING

CONSULTING ENGINEERS

203 South Rosedale Av., Aurora, IL. 60506 Bus: 630-892-0698 Fax: 630-892-1087

ZE Job # 04-119

1 WKZ 9-13-04 TORQUE


Rev. by Date

- 7. Install the Label at the location shown.
- 8. Check the functional operation of the Hinged Bollard Post.
- Note: S.S. shims, tools, grease, and padlock are not provided.

		BILL OF MATERIA	\L
ITEM	PART #	DESCRIPTION	QTY.
1	HRPF1	HRPF1	1
2	HRPF2	HRP BASE - WELDMENT	1
3	0019	1-8 UNC-2Ax5" HINGE BOLT SS 18-8	1
4	0020	1-8 UNC-2B HEX NUT - SS 316	1
5	4004	HRP LOCKING PIN	1
6	0105	LABEL	1

drawing. - Steel

drawing.

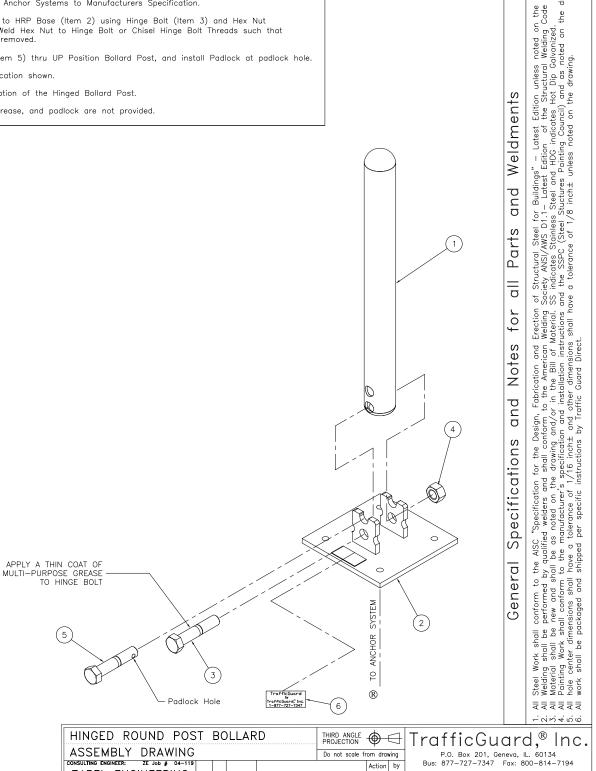

Do not scale from drawing

Description

Action by

Design WKZ

Drawn CJD

D

Checked WKZ Scale: 1 = 4 Drawing Date:

35.50 Pounds

HRPA2-1

8-4-2002 Sheet: 2 of 2

