

GENERAL WARNINGS AND CAUTIONARY STATEMENTS FOR FIXED BOLLARDS

In order to safely and effectively use any TrafficGuard*, Inc. ASTM F3016 Crash Rated product, please read and understand the General Warnings and Cautionary Statements contained below. If you have any questions about any of these General Warnings and Cautionary Statements, or about any aspect of TrafficGuard*, Inc.'s products or literature, please contact TrafficGuard*, Inc. at 877-727-7347, or email sales@trafficguard.net.



BOLLARD SELECTION AND PLACEMENT

based on vehicle weight, speed and other site specific factors to be determined by owner.



FAILURE TO UTILIZE TRAFFICGUARD®, INC. AUTHORIZED PARTS, OR MODIFICATIONS to the TrafficGuard*, Inc. products, or failure to follow the recommended

installation procedures, will result in your warranty being null and void.



READ AND FULLY UNDERSTAND THE INSTALLATION INSTRUCTIONS

before attempting to install any TrafficGuard®, Inc. bollard product.



SUBSTITUTION OF COMPONENTS MAY IMPAIR THE PROPER FUNCTION

of TrafficGuard*, Inc. bollard products. If you need replacement parts, please contact TrafficGuard*, Inc. at the number and email above.



FOR MAXIMUM EFFECTIVENESS


of TrafficGuard®, Inc. bollard products, be sure to properly maintain bollards by replacing any damaged, corroded or missing components, and reapply paint as required to maximize visibility. Failure to properly maintain product can negatively impact the bollards performance over time.



TO ENSURE VISIBILITY

of bollards, be sure to apply all decals that are provided with the product, and in the manner recommended by TrafficGuard®, Inc.

ROUND FIXED POST SERIES

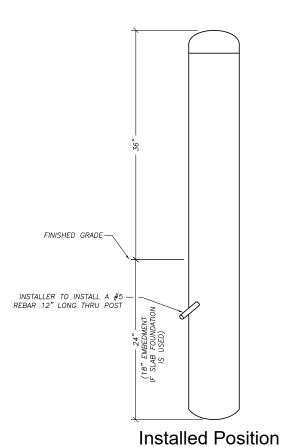




If applicable, attach reflective warning labels to front & back of bollard after installation.

TrafficGuard®, Inc.	NAME:	USED ON	TOLERANCES	ACTION	BY	DRAWING NUM REP Ser	BER:	
www.trafficquard.net	DISPLAY	1		DESIGN:	WKZ			
sales@trafficguard.net	 DO NOT SCALE FROM DRAWING UNITS ARE IN INCHES U.N. 	l	0.XX= ± 0.06 ANGULAR=± 1*	DRAWING:	CJD	SCALE: 1:4	DATE: 2018.4.16 SIZE 34 X 22	
877-727-7347 FAX: 800-814-7194	 DIMENSIONING BASED ON ASME Y14.5M-1994 		FRACTION=±1/16	CHECKED:	WKZ	WT: 135 LBS	S COPYRIGHT: 2006 SHT: 1 of 1	
This drawing is the licensed property of TrafficGuard®, Inc., Geneva, IL and must not be duplicated or used in whole or in part for the making of drawings, prints								

This drawing is the licensed property of TrafficGuard®, Inc., Geneva, IL and must not be duplicated or used in whole or in part for the making of drawings, print or parts to the detriment of, or harm to, the owner. In accepting this drawing, the recipient agrees to keep the information contained confidential.

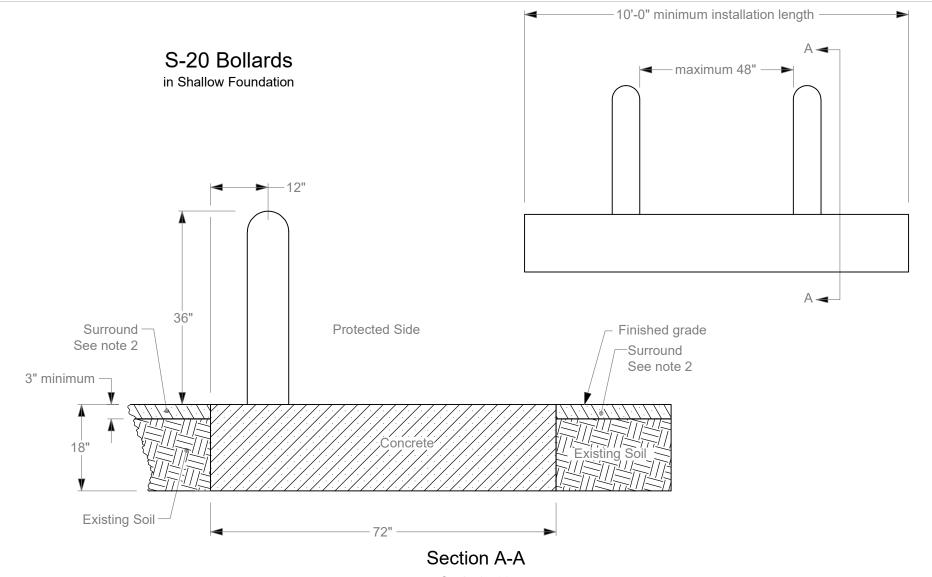

Scale 1:20

1. The concrete must be minimum 3000 psi compressive strength, with layers of #5 (\emptyset 5/8") grade 60 rebar combined with strategically located V-bars and U-bars per construction foundation details provided once materials have been ordered. Total weight of rebar is approximately 90 lbs. per Bollard. (This is assuming the Bollards are at maximum allowable spacing. Adjust as needed for closer Bollard spacing.)

2. The foundation details provided have been full-scale crash tested and qualified as a rigid foundation as defined by ASTM F3016-14 when installed in continuous paving with a minimum thickness of 3 inches. When installed in any other configuration, it is the responsibility of the purchaser to verify that the supporting pavement or adjoining structure is capable of providing adequate strength to limit the horizontal deformation of the foundation at grade to one inch or less for the performance Condition Designation specified.

2018.4.16


TrafficGuard®, Inc.

www.trafficguard.net sales@trafficguard.net

877-727-7347 FAX: 800-814-7194



This drawing is the licensed property of TrafficGuard®, Inc., Geneva, IL and must not be duplicated or used in whole or in part for the making of drawings, prints or parts to the detriment of, or harm to, the owner. In accepting this drawing, the recipient agrees to keep the information contained confidential.

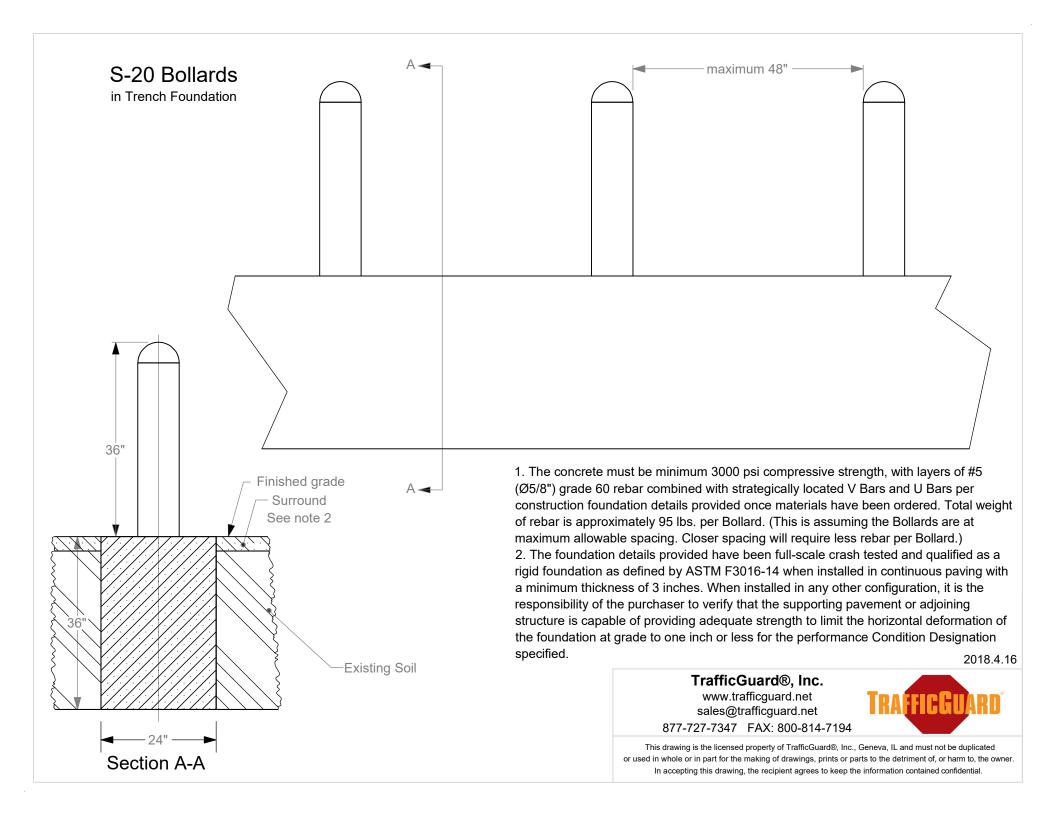



TrafficGuard®, Inc. Care & Maintenance

Ensure optimal appearance and long term performance

All TrafficGuard® ASTM F3016 crash rated products are manufactured with high quality materials for premium aesthetics and long term durability. With proper care and maintenance, our products will withstand years of service with minimal wear and corrosion in most North American environments.

General Care & Maintenance

Inspection: All TrafficGuard® products should receive routine inspection and cleaning every 6 months. To avoid progression of damage, identify and address problems as early as possible. Loose or missing parts should be tightened or replaced immediately. Some environments, including high-saline locations subject to saltwater spray or de-icing salts, or high-traffic areas with abundant particulates or other pollutants, will require more frequent attention. Pay close attention to the powder coated finish. Any signs of deterioration of the finish or rusting of the steel should be addressed immediately. Never allow leaves, mulch or other moisture holding materials to be placed around the area where the pipe meets the foundation.

Cleaning: Routine (at least every 6 months) cleaning with soap and water is usually sufficient to maintain TrafficGuard® products. Use a soft nylon brush to remove any accumulated dirt. Wash with mild soap or detergent, then rinse in clean water and wipe dry with a soft cloth. Neglected or damaged products may require additional care. Refer to Stainless Steel Care and Maintenance and Powder Coating Care and Maintenance.

Removable Bollards: Bollard posts, ground sleeve lids or filler pieces should be used periodically – six times per year at a minimum to insure functionality and to check all parts for damage or deterioration that may be hidden from observation.

Heavily damaged products: Heavy damage includes structural compromises such as visible dents, cracks, breaks and rust that can undermine the integrity of a product. Heavily damaged products should be removed from service until a repair or replacement can be made. To prevent worsening of damage, any significant rust should be removed as soon as possible. If any parts are broken or missing, contact TrafficGuard®'s Sales Department to determine the availability of replacements.